

eNFC Starter Kit



(Items)

- ① RFID reader/writer
- ② CD-ROM (demo software)
- ③ USB cable
- ④ Coaxial cable
- ⑤ Electric field antenna
- ⑥ Flexible band (2 items)
- ⑦ Wearable ID tag (2 items)



Main Spec:

RFID reader/writer	TR3X-MU01 (Takaya Corp.)
Host Interface	USB
Frequency	13.56MHz
RF Compliance	Japan Ministry of Internal Affairs and Communications designation FC-17003
Output Power	300mW±20%
Tag IC	ICODE SLIX (NXP Semiconductors)

Usage Steps

- Place the wearable ID tag electrode so that it comes into contact with your skin.
- Touch the surface of the electric field antenna with the hand while wearing the ID tag.
- The ID is automatically authenticated by the hand touch.

eNFC Inc.

3-2-16-805 Nishiazabu, Minato-ku, Tokyo, 106-0031 Japan
URL: <http://enfc.jp/eng/> E-MAIL: info@enfc.jp

